


Fernco Qwik Cap Installation

Temporary or permanent cap for pipe ends, testing & cleanouts.

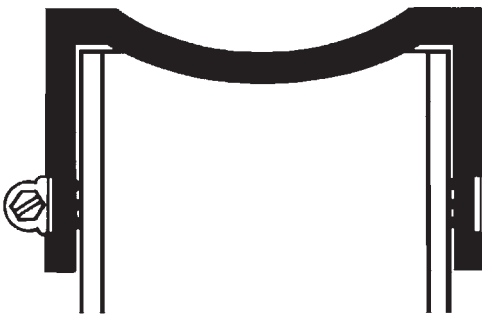

1. Loosen the stainless steel clamp. Do not remove clamp from Qwik Cap.
2. Push Qwik Cap onto the open end of pipe.
3. Tighten clamp to 60 inch-lbs. torque.

