

Comerica P A R K

Fernco's urinal seal belts a home run at Comerica Park

Just as the Detroit Tigers are always looking to improve performance on the field, the operations staff at Comerica Park is looking to do the same. Comerica Park's Senior Services Manager Ed Goward contacted a local plumbing distributor to investigate upgrading the plumbing at the facility. The distributor recommended a newly developed Wax Free Urinal Seal™ manufactured by Fernco, Inc., based in Davison, Michigan.

Goward installed a handful of Fernco's urinal seals back in February of 2011, mainly in trouble spots throughout the stadium. "We are forty games into the season and our new seals are working perfectly," Goward stated. "I would highly recommend anyone dealing with leaky urinals to make the switch to Fernco's Wax Free Urinal Seal."

Soon all of Comerica Park's urinals, a total of 300, will be fitted with the new seal as a preventive measure. Problem solved.

No runs. No drips. No errors.



Learn more about
Fernco's Wax Free
Urinal Seal TODAY!

www.fernco.com/urinalseal



United States
PH: 810-503-9000
FX: 810-503-1015

www.fernco.com

Canada
PH: 519-332-6711
FX: 519-332-8610

Fernco Wax Free Urinal Seal

Leak-Free, Hassel-Free, Worry-Free

1) WALL PREPARATION

NEW: Install the hanger brackets and the drain connection according to the urinal manufacturer's instructions.
REPLACEMENT: Urinal flange wall adapter must be clean and free from wax or old sealing material.



2) PREPARE URINAL

Urinal must be clean, dry, and free from wax or old sealing material.



3) INSTALL URINAL SEAL

Insert the Fernco urinal seal into the wall adapter far enough that it will not fall out during urinal installation. Remove white release paper from adhesive.



Discover the Fernco Wax Free Urinal Seal advantages

Replace the seal **every time...**



...or do it **right the first time!**

4) HANG URINAL

Hang the top of the urinal on the hanger brackets, then pivot the urinal down until the seal makes contact with the urinal. Reach behind the urinal and press the adhesive firmly onto the back of the urinal.



5) SECURE URINAL

Tighten the bolts to secure the urinal against movement.
Do not over-tighten or the urinal may break.






6) CHECK FOR LEAKS

Connect water supply and verify the drain connection is leak free.



DIMENSIONS

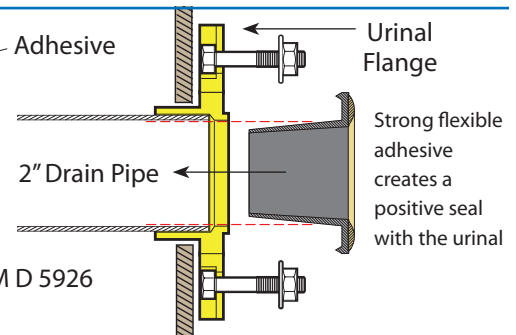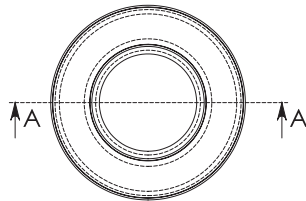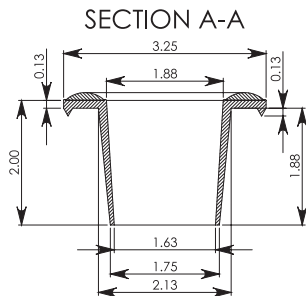

- Gasket Material: Plasticized PVC 75 Conforming to ASTM D 5926
- Adhesive: Permanent Pressure Sensitive Adhesive



ASTM A 1045

U.S. Patent Numbers: D655,796S; D655,795S; D655,400S; D649,625S



www.fernco.com